



User Manual

4K HDBaseT 2.0™ Extender w/ HDMI® & USB 2.0 KVM support

Model PT-HDBT-1002

Designed in Germany
© 2018 PureLink GmbH All rights reserved.

Version 1.0

Preface

Read this user manual carefully before using the product. Pictures are shown in this manual for reference only. Different model layouts and specifications are subject to the physical product. This manual is for operation instructions only, not for any maintenance usage.

In the constant effort to improve our product, we reserve the right to make changes in functions or parameters without prior notice or obligation.

Trademarks

Product model and logo are trademarks. Any other trademarks mentioned in this manual are acknowledged as the properties of the trademark owner. No part of this publication may be copied or reproduced without the prior written consent.

FCC Statement



This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.

REACH | 1907/2006/EU

ROHS | 2011/65/EU

PureLink hereby declares that this product PureTools PT-HDBT-1002 complies with Directives 1907/2006/EU and 2011/65/EU.

EMC / LVD (Electro Magnetic Compatibility / Low Voltage Directive)

PureLink GmbH hereby declares that this product PureTools PT-HDBT-1002 complies with Directives 2014/30/EU and 2014/35/EU. The full text of the EU Declaration of Conformity is available at the following Internet address:

http://www.purelink.de/ce/4251364715277_CE.pdf



SAFETY PRECAUTIONS

- To insure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.
- Unpack the equipment carefully and save the original box and packing material for possible future shipment.
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.

Contents

1. Product Introduction	6
1.1 Features.	6
1.2 Packing List.	6
2. Panel Description	7
2.1 Transmitter	7
2.2 Receiver.	8
3. System Connection	10
3.1 Usage Precautions	10
3.2 System Diagram	10
3.3 Connection Procedure	11
4. Specification	12
5. Panel Drawing	13
6. Troubleshooting & Maintenance	14
7. After Sales Service	14

1. Product Introduction

Compliant with HDMI 2.0 & HDCP 2.2, the HDBaseT 2.0 KVM Extender Set PT-HDBT-1002 from PureTools is a 4K HDMI Extender set consisting of transmitter and receiver and developed with the latest HDBaseT™ 2.0 technology to extend uncompressed HDMI video, audio, USB 2.0, control signals and PoC over a single CAT5e/6 cable. The unidirectional PoC compliant extender comes with only one power supply; the receiver can be powered via the transmitter.

1.1 Features

- Compatible with HDMI1.4 and backwards compatible with all previous HDMI standards, delivering high-resolution AV signals up to FullHD / 1080p, 3D, 4K@60Hz
- Supports HDBT2.0, transmitting a 1080p / 4K@60 (4:2:0) signal in up to 100m over a single Cat.6 cable
- EDID Pass-Through
- HDCP2.2 compliant
- Front panel status LEDs for power, link & HDCP
- USB & RS232 control
- Unidirectional PoC (Power over Cable)


1.2 Packing List

- 1 x PT-HDBT-1002 Transmitter
- 1 x PT-HDBT-1002 Receiver
- 4 x Detachable Mounting Ears
- 4 x Screws
- 1 x Power Adapter (DC 12V 2A)
- 8 x Plastic Cushions
- 1 x User manual

Note: Please contact your distributor immediately if any damage or defect in the components is found.

2. Panel Description

2.1 Transmitter

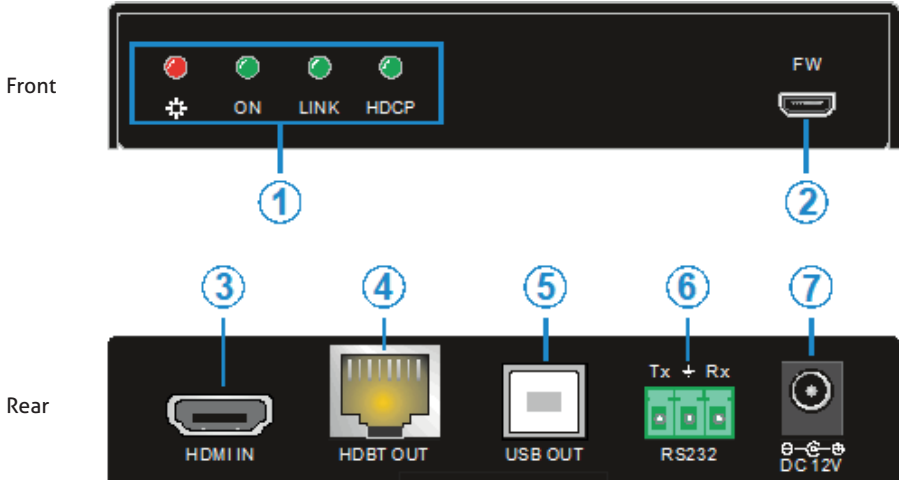


No.	Name	Description
1	Indicators	<p>Power:</p> <ul style="list-style-type: none"> • OFF: No power • RED: DC power present <hr/> <p>ON: Working status indicator</p> <ul style="list-style-type: none"> • OFF: Not operational • Blinking GREEN: Normal operation <hr/> <p>LINK: HDBT Link status indicator</p> <ul style="list-style-type: none"> • OFF: No Link • GREEN: Link successful • Blinking GREEN: Link problem <hr/> <p>HDCP: HDCP compliant indicator</p> <ul style="list-style-type: none"> • OFF: No HDMI traffic(no picture) • GREEN: HDMI signal with HDCP • Blinking GREEN: HDMI signal without HDCP

No.	Name	Description
2	FW	Micro USB port, used for firmware update. Firmware updated need auxiliary equipment, please contact with our after-sales department for more details.
3	HDMI IN	Connect with HDMI source.
4	HDBT OUT	Connect to the HDBT IN port on rear panel of the Receiver via CAT5e/CAT6a cable, compliant with HDBT2.0 and support unidirectional PoC to power the Receiver.
5	USB OUT	Type-B USB port, connect to PC to receive remote USB control
6	RS232	Serial port, connects with control device or device to be controlled, supports bi-directional RS232 control.
7	DC 12V	Connect with a DC12V 2A power adapter.

! Pictures for reference only, subject to our existing products.

2.2 Receiver

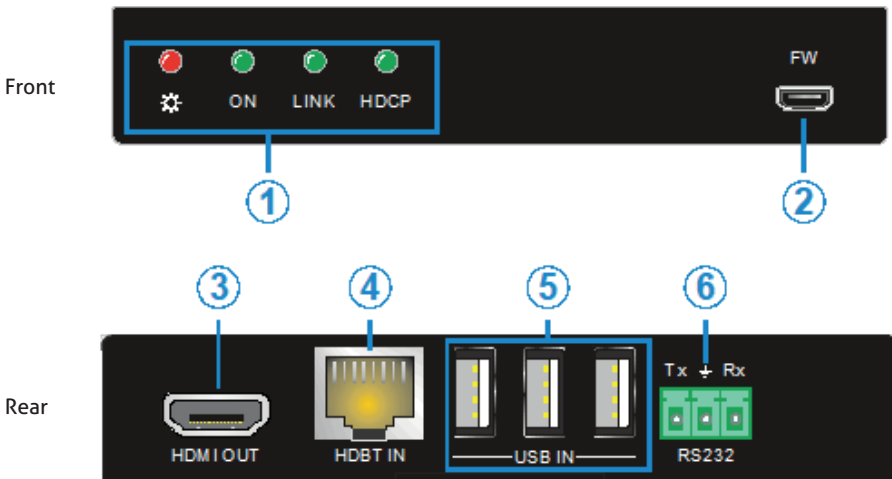


No.	Name	Description
1	Indicators	Power: <ul style="list-style-type: none">• OFF: No power• RED: DC power present
		ON: Working status indicator <ul style="list-style-type: none">• OFF: Not operational• Blinking GREEN: Normal operation
		LINK: HDBT Link status indicator <ul style="list-style-type: none">• OFF: No Link• GREEN: Link successful• Blinking GREEN: Link problem
		HDCP: HDCP compliant indicator <ul style="list-style-type: none">• OFF: No HDMI traffic(no picture)• GREEN: HDMI signal with HDCP• Blinking GREEN: HDMI signal without HDCP
2	FW	Micro USB port, used for firmware update. Firmware updated need auxiliary equipment, please contact with our after-sales department for more details.
3	HDMI OUT	Connect with HDMI display.
4	HDBT IN	Connect to the HDBT OUT port on the Transmitter via CAT5e/ CAT6a cable, compliant with HDBT2.0.
5	USB IN	Type-A USB ports, connect to mouse/ keyboard/ U-disk for remote USB access.
6	RS232	Serial port, connects with control device or device to be controlled, supports bi-directional RS232 control.

3. System Connection

3.1 Usage Precautions

- Make sure all components and accessories are included before installation.
- System should be installed in a clean environment with proper temperature and humidity.
- All of the power switches, plugs, sockets, and power cords should be insulated and safe.
- All devices should be connected before power on.

3.2 System Diagram

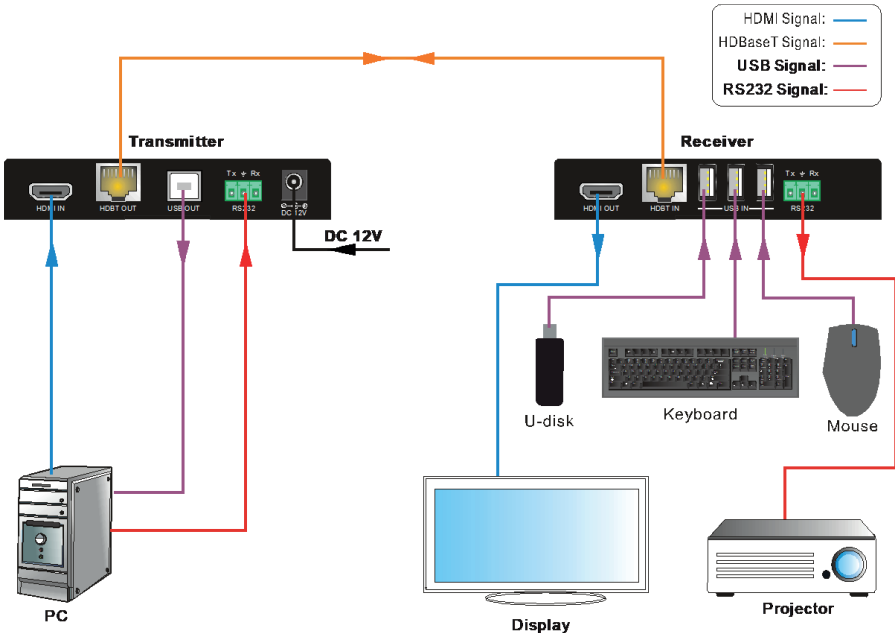

3.3 Connection Procedure

Step1.

Connect HDMI source (such as PC) to HDMI IN port of the Transmitter with an HDMI cable.

Step2.

Connect HDBT OUT port of the Transmitter to HDBT IN port of the Receiver through a straight-thru CAT5e/CAT6 cable.

Step3.

Connect a HDMI display to HDMI OUT port of the Receiver with HDMI cable;

Step4.

When using the USB control, do the following:

- a) Connect PC to the USB OUT port of Transmitter.
- b) Connect Mouse/ Keyboard/U-disk to the USB IN port(s) of Receiver.

Step5.

When using the bi-directional RS232 control, do the following:

- a) Connect PC to the RS232 port at either the Transmitter or the Receiver.
- b) Connect a third-party device (such as projector) need to be controlled to the RS232 port at the other end.
- c) Send RS232 commands to control the third-party device. For more details about RS232 commands, please refer to the user manual for the third-party device.

Step6.

Connect with DC12V power adaptor to the power port of Transmitter, the Receiver will be powered synchronously via PoC.

Note:

- System Diagram shown in this manual is for reference only, more specific schemes depend on real-time applications.
- Connect HDBT ports via straight-thru CAT5e/6 cable with TIA/EIAT568B standard terminations at both ends.
- RS232 communication protocol: Baud Rate: 9600; data bit: 8; stop bit: 1; parity: none. HDBT Transceiver receives RS232 control from devices with various baud rate (2400, 4800, 9600, 19200, 38400, 57600, 115200).


4. Specification

Transmitter	
Input	• 1x HDMI (19 pin Type-A male)
Output	• 1x HDBT (RJ45 female); 1x USB OUT (Type-B)
Other	• 1x RS232 (3-pin pluggable terminal block)
Receiver	
Input	1x HDBT (RJ45 female); 1x USB IN (Type-A)
Output	1x HDMI (19 pin Type-A male)
Other	1x RS232 (3-pin pluggable terminal block)
General	
HDMI Embedded audio	PCM/Dolby Digital/DTS/DTS-HD
Signal Standard	HDMI1.4 & HDCP2.2
Transmission Mode	HDBaseT 2.0
Transmission Distance	1080p / 4K@60 (4:2:0) ≤100m(Cat6)
Resolution	Up to 4K@60Hz 4:2:0 / UltraHD
Bandwidth	10.2Gbps
EDID Management	EDID Pass-Through
Operation Temperature	-5 ~ +55°C
Storage Temperature	-10 ~ +55°C
Relative Humidity	10% ~ 90%
External Power Supply	Input:100V~240V AC; Output: DC 12V 2A
Power Consumption	18W(max)
Dimension (W*H*D)	4.5"× 0.86" × 3.74"/116 × 22 × 95(mm)
Net weight	TX:197g; RX:198g


Note: All nominal levels are at ±10%.

5. Panel Drawing

Transmitter

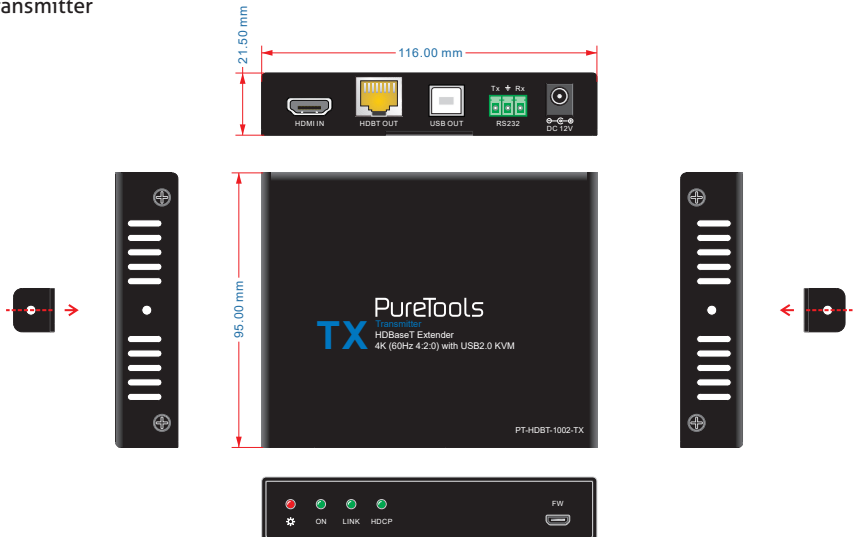

Receiver

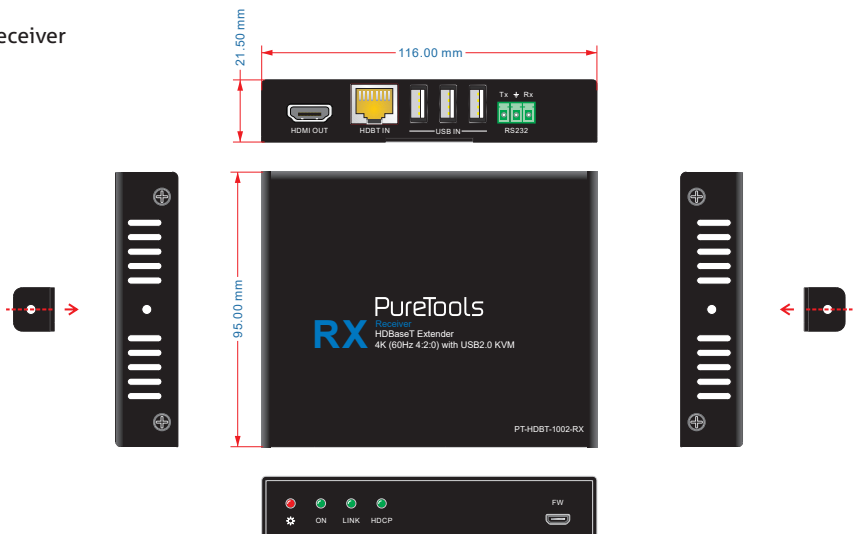

6. Troubleshooting & Maintenance

Problems	Potential Causes	Solutions
No reaction to any operation, power indicator is off	Haven't been powered on	Insert power adapter to Transmitter
Abnormal indication of the status LEDs	Wrong specification of the power adapter	Change for DC 12V 2A power adapter.
Color lose or poor picture quality	Signal loss caused by long transmission distance beyond effective value	Make sure the connecting cable is within 100m and of good quality.
	Bad quality of the HDMI cable	Ensure the HDMI cables used at source, Transmitter, Receiver and display are properly connected and are of good quality
Cannot use the device	the device is broken	Send it to authorized dealer for repairing.

Note: If your problem persists after following the above troubleshooting steps, seek further help from authorized dealer or our technical support.

7. After Sales Service

The return of a product implies the full agreement of the terms and conditions hereinafter. There terms and conditions may be changed without prior notice. If there appear some problems when running the product, please check and deal with the problems referring to this user manual. The conditions apply to the customer service provided only for products sold by an authorized distributor. Any transport costs are borne by the users during the warranty. Customer Service will accept defective product(s) in the scope of warranty coverage at the sole condition that the defeat has been clearly defined, and upon reception of the documents or copy of invoice, indicating the date of purchase, the type of product, the serial number, and the name of distributor.

1) Product Limited Warranty

This product will be free from defects in materials and workmanship for two years.

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the warranty period must be presented to obtain warranty service.

2) What the warranty does not cover (servicing available for a fee).

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
 - Damage, deterioration or malfunction caused by:
 - Normal wear and tear.
 - Use of supplies or parts not meeting our specifications.
 - No certificate or invoice as the proof of warranty.
 - The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
 - Damage caused by acts of god.
 - Servicing not authorized by distributor.
 - Any other causes which does not relate to a product defect.
- Shipping fees, installation or labor charges for installation or setup of the product.

3) Technical Support

For any questions or problems, contact your distributor or reseller and tell them the respective product name and version, the detailed failure situation as well as the formation of the cases.

Asking for Assistance

Technical Support:

Phone: +49 5971 800299 - 0

Fax: +49 5971 800299 - 99

Technical Support Hours:

8:30 AM to 5:00 PM Monday thru Thursday

8:30 AM to 4:00 PM Friday

Write To:

PureLink GmbH

Von-Liebig-Straße 10

D - 48432 Rheine

www.purelink.de

info@purelink.de